



GUARANTEED...FOR LIFE.

# CARGO-LOGIC™

PT #40002

## Important Safety Information


To avoid risk of personal injury or property damage:




- Do not use Cargo-Logic system as a safety restraint for large, heavy, or unsafe objects.
- Large, heavy, or unsafe objects may be thrown about your vehicle during heavy braking or during an accident.
- Do not use the Cargo-Logic™ system to stack objects higher than vehicle seatbacks.

## Contents


NOTE: Actual product may vary from illustration.

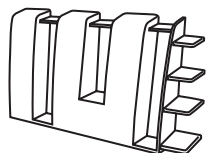

Male Block

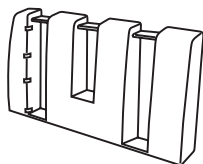

Female Block

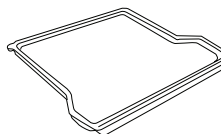

OR




Cargo Mat

## Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Align the male block with a female so that Velcro® faces down. Align the fingers with the corresponding recesses.

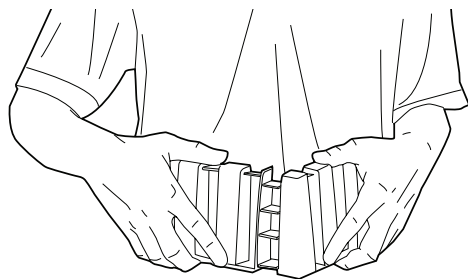


1

Place the parts on a firm surface and press until they snap together.

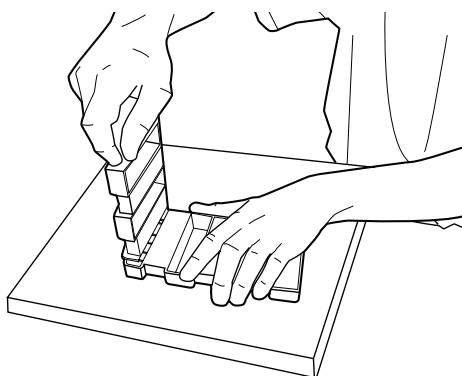


2

Install the cargo liner by positioning it in the cargo area or trunk. See below illustration for examples of how to use the Cargo-Logic system.

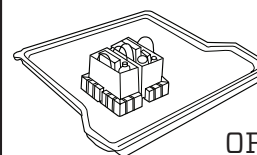

OR

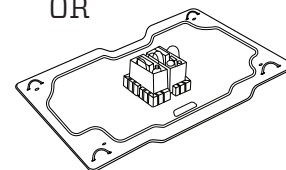

3

## Care and Cleaning

1. For normal cleaning simply vacuum with a non-motorized attachment.
2. For heavy cleaning wash with mild soap. Hose off and air dry.

Note: Do not use high pressure sprayers. Do not use heat guns or heated dryers.