

ROUGH COUNTRY

SUSPENSION SYSTEMS®

FORD 2022 Bronco Sound Bar Mount

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

Kit Contents:

Wiring Harness x1
 Aux Cable Adapter x1
 Dr Side Bracket x1
 Pass Side Bracket x1

Tools Needed:

T30 Torx Bit
 4mm Allen Wrench
 10mm Socket/Wrench

Hardware Included:

6mm x 20mm Bolts x2
 6mm Flat Washers x4
 6mm Nylock Nuts x2



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs




INSTALLATION INSTRUCTIONS


1. Remove the roof for easier access to the mounting holes and remove the factory speakers using a T30 Torx bit. **See Photo 1 and Photo 2.**





2. Install the supplied Dr/Pass side mounting brackets using the stock hardware. **See Photo 2.**
3. Install the mounting rings supplied with the soundbar using hardware supplied with the soundbar. **See Photo 3.**
4. Install the spacer plug to the mounting rings to make a flat surface. **See Photo 4.**

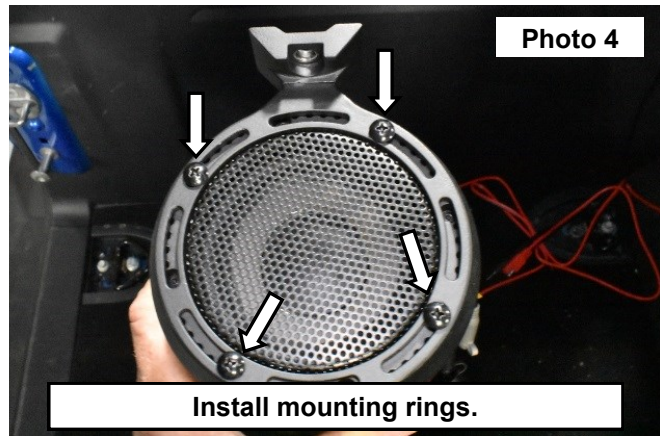

5. Install the sound bar to the Dr/Pass side mounting brackets with the supplied 6mm x 20mm button head bolts, flat washers, and lock nuts using a 4mm Allen wrench and 10mm socket/wrench. **See Photo 5.**

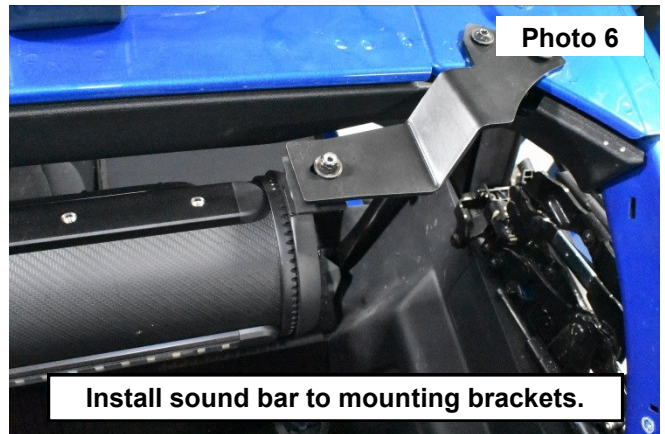

6. Install the aux input wire from the speaker to the converter using the red/white-aux wire. **See Photo 7.**
7. Connect both harnesses on the converter to the factory speaker harnesses. **See Photo 8.**

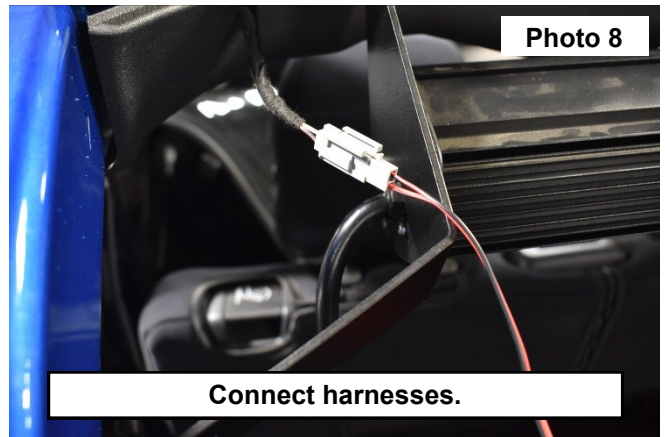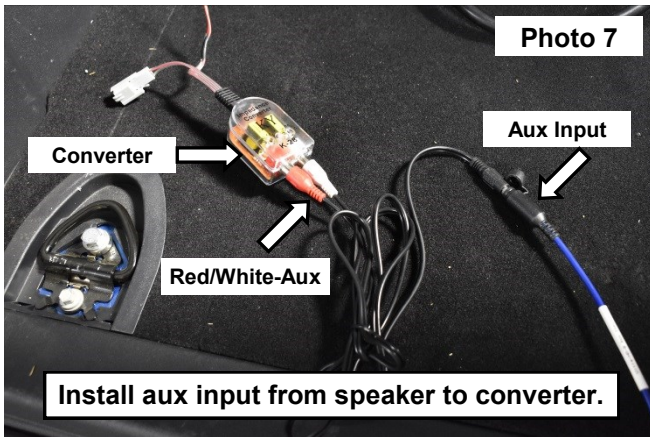

8. Connect the speaker to the power source along the desired route.



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.



ROUGH COUNTRY

SUSPENSION SYSTEMS®

FORD 2022 Bronco Sound Bar Mount

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

Kit Contents:

Wiring Harness x1
 Aux Cable Adapter x1
 Dr Side Bracket x1
 Pass Side Bracket x1

Tools Needed:

T30 Torx Bit
 4mm Allen Wrench
 10mm Socket/Wrench

Hardware Included:

6mm x 20mm Bolts x2
 6mm Flat Washers x4
 6mm Nylock Nuts x2



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





INSTALLATION INSTRUCTIONS


1. Remove the roof for easier access to the mounting holes and remove the factory speakers using a T30 Torx bit. **See Photo 1 and Photo 2.**





2. Install the supplied Dr/Pass side mounting brackets with the stock hardware on the top and the supplied 6mm x 20mm button head bolts using a 4mm Allen wrench. **See Photo 3 and Photo 4.**

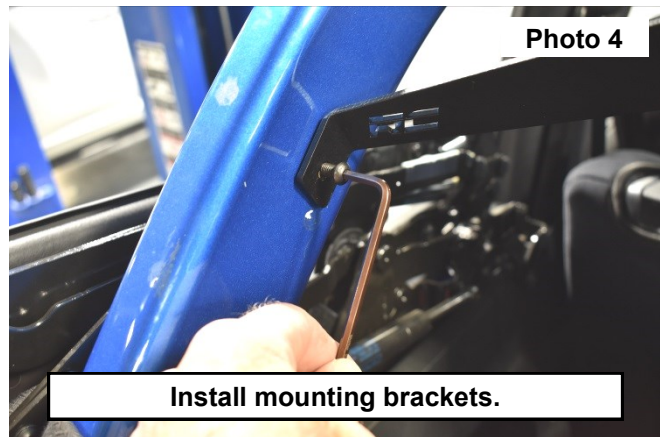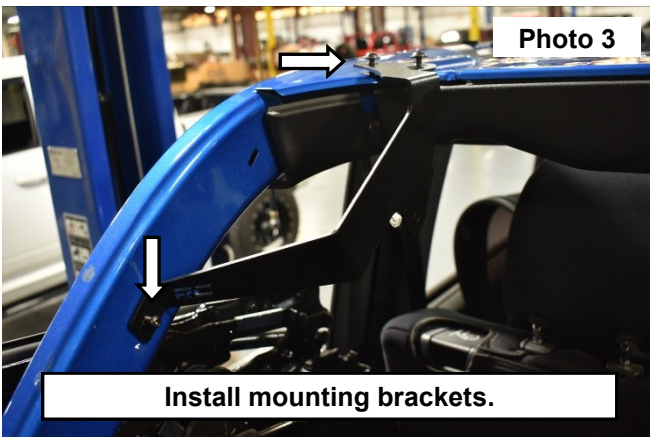

3. Install the sound bar to the Dr/Pass side mounting brackets with the hardware supplied with the soundbar. **See Photo 5 and Photo 6.**

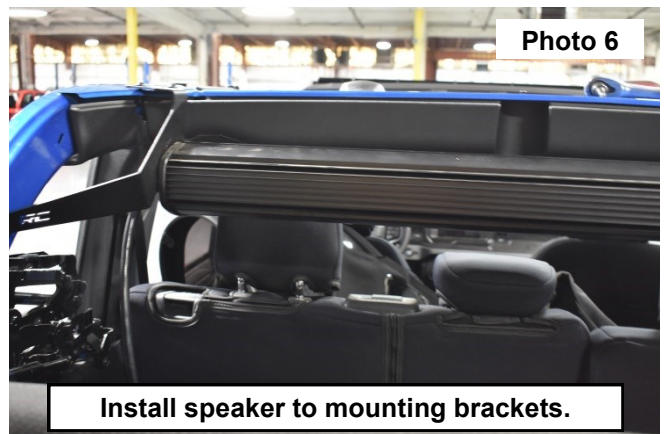

4. Install the aux input wire from the speaker to the converter using the red/white-aux wire. **See Photo 7.**
5. Connect both harnesses on the converter to the factory speaker harnesses. **See Photo 8.**

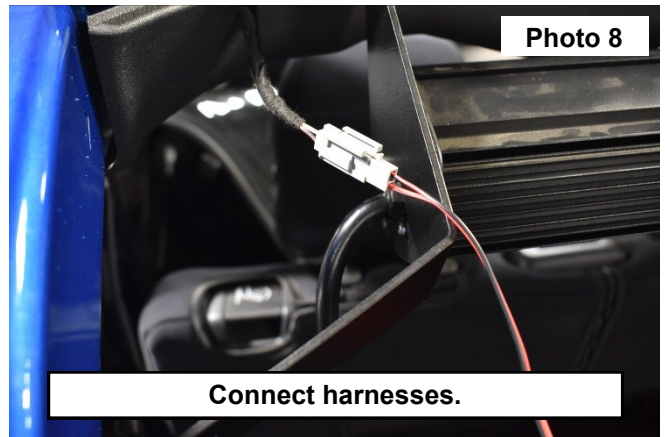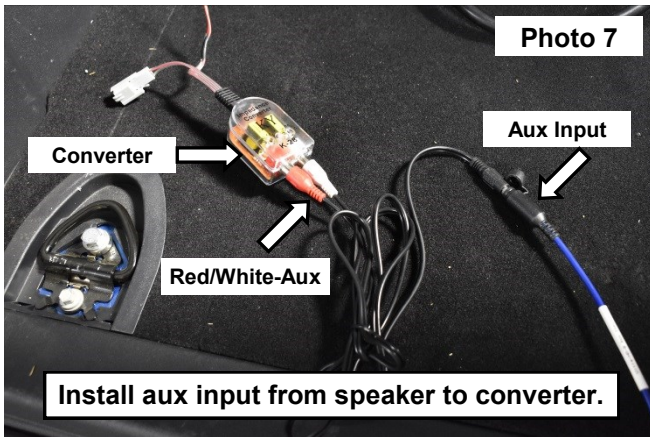

6. Connect the speaker to the power source along the desired route.



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

